


Product description

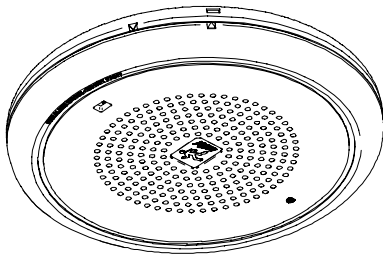

The Genesis Ceiling Speaker is an audible fire alarm notification appliance designed for indoor ceilings and walls. See Table 1 for a list of model numbers.

The speaker includes a field configurable switch for selecting the desired wattage tap. The wattage tap setting is locked in place and remains visible after final installation.

Install this device in accordance with applicable requirements in the latest editions of the NFPA codes and standards and *Canadian Electrical Code, Part 1*, Section 32, and in accordance with the local authorities having jurisdiction.

Table 1: Models

Description	Number	
Speaker, 25 Vrms, white	ADTGC-S2	MGC-S2
	EGC-S2	XLSGC-S2
	GC-S2	ZGC-S2
	GC-S2-LG	
Speaker, 25 Vrms, white, with FIRE marking	ADTGCF-S2	MGCF-S2
	EGCF-S2	XLSGCF-S2
	GCF-S2	ZGCF-S2
	GCF-S2-LG	
Speaker, 70 Vrms, white	ADTGC-S7	MGC-S7
	EGC-S7	XLSGC-S7
	GC-S7	ZGC-S7
	GC-S7-LG	
Speaker, 70 Vrms, white, with FIRE marking	ADTGCF-S7	MGCF-S7
	EGCF-S7	XLSGCF-S7
	GCF-S7	ZGCF-S7
	GCF-S7-LG	
Speaker, 70 Vrms, red, with FIRE marking	EGCFR-S7	
	GCFR-S7	
	MGCFR-S7	

Specifications

Operating voltage: 25 Vrms (model S2), 70 Vrms (model S7)
 Supervisory voltage: 30 V maximum
 Sound level output: See Table 2
 Speaker response: 400 to 4,000 Hz
 Wire size: 12 to 18 AWG (2.50 to 0.75 sq mm)
 Compatible electrical boxes
 North American 4 in square electrical box, 2-1/8 in deep
 (UL/ULC listed flush mounted with no extension ring)
 Operating environment
 Temperature: 32 to 120 °F (0 to 49 °C)
 Humidity: 0 to 93% RH, noncondensing at 90 °F (32 °C)
 Agency listings: Meets ULC-S541 and UL 1480 fifth edition.
 Meets BS EN 60065:2002. Nameplate marking is located on the inside surface of the device.

Table 2: Sound level output (dBA)

Wattage	25V (UL)	25V (ULC)	70V (UL)	70V (ULC)
1/4 W	80	78	80	81
1/2 W	84	81	84	81
1 W	87	87	87	87
2 W (UL)	90		91	
2.2 W (ULC)		90		90

dBA = Decibels, A-weighted

UL 1480: Sound level output at 10 ft (3.05 m) measured in a reverberant room using 400 to 4,000 Hz band limited pink noise.

ULC-S541: Meets or exceeds 85 dBA in an anechoic chamber at 10 ft (3.05 m).

Directional characteristics: Within 6 dB of on-axis sound level when measured 90° off-axis (horizontal).

Installation instructions

Caution: Electrical supervision requires the wire run to be broken at each terminal. Do not loop the signaling circuit field wires around the terminals.

To install the speaker:

1. Remove the cover by depressing the tab on the side of the unit with a small screwdriver. Turn the cover counterclockwise to release.
2. Connect the speaker terminals to the signal circuit field wiring. You must observe polarity for the unit to function properly. See Figure 1.
3. Slide the wattage switch to the desired wattage tap (2 W, 1 W, 1/2 W, or 1/4 W) by aligning it with the indicator below the switch. See Figure 2.

4. Mount the unit onto a compatible electrical box. The switch selector position must be as shown in Figure 3.
5. Replace the cover by positioning the alignment arrows together and rotating the cover clockwise.
6. Test the unit for proper operation.

Maintenance

This unit is not serviceable or repairable. Should the unit fail to operate, contact the supplier for replacement.

Perform a visual inspection and an operational test twice a year or as directed by the local authority having jurisdiction.

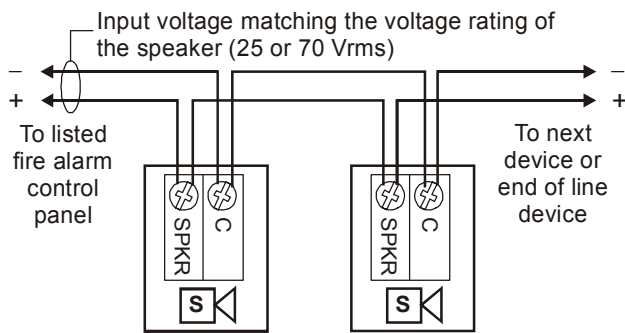


Figure 1: Wiring diagram

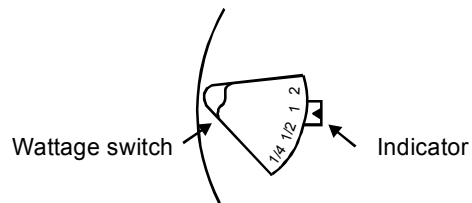


Figure 2: Wattage switch

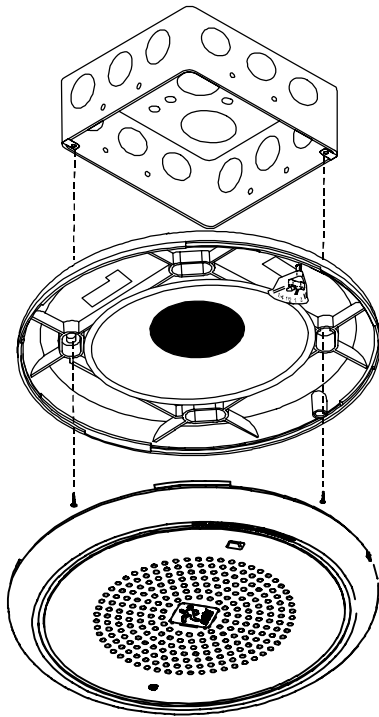


Figure 3: Mounting diagram (flush mounted electrical box)